

APPLYING COLOR TIPS

Let's face it everyone needs a little **COLOR** in their life! Thanks to "Larry" (a devoted dealer) we think we may have discovered the best option for spray-on-color to date, check out recommendations Page.

For the best results follow these instructions!

Clean The Area: Sometimes the extrusion process can leave a film over the PVC threads; therefore for the best cohesion results first clean the general area where you're applying color with rubbing alcohol, or a detergent. Apply the cleaner to a rag and rub the area that you intend to color, and then let it DRY. You can accelerate the drying process by applying air from your blow dryer.

STEPS:


1. Clean intended area, then let it DRY.
 2. Apply Stencil (Vehicle Wrap)
 3. Apply Color – (Vinyl & Fabric Coating - 2 coats blow dry each coat)
 4. Blow Dry.
-



Apply Stencil



Paint & Blow-Dry

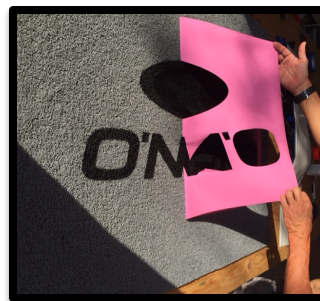

Peel



Done

Transition Tip: When fading colors always use the darker colors first then transition to lighter (see video)

Custom Logos or Brand Logos: Recommendation Page

Do not use a "heat-gun" to dry the area. The color dries faster and is more effective from the "air flow process" produced by most standard blow dryers.